

Lancing Rails & Extensions

STEP 1

Rail & Extensions

Select rail and extensions long enough for sufficient cleaning stroke.

**Rails and Extensions
Adapt to Your Length**



**BRLM™ 080
Extension Kit**

**BRLM™ 300-15
Lancing Drive Rail**

Getting Started - Selecting Lancing Rails

Every Lancing Rail System from **StoneAge®** starts as a basic 15 ft unit (**BRLM™ 300-15**), with additional lengths available through our Rail Extension Kits (**BRLM™ 080**). Extensions come in 5 ft, 10 ft and 15 ft sections, and can be added in multiple fashion, all the way up to 60' maximum stroke. Note the chart at right.

Rail & Extension Specifications

Basic Rail	WEIGHT	LENGTH	STROKE
BRLM™ 300-15	122 lbs 55 kg	15 ft 4.6 m	12 ft 3.7 m
Extension Kits*	WEIGHT	LENGTH	ADDS STROKE
BRLM™ 080-05*	26 lbs 12 kg	5 ft 1.5 m	4.8 ft 1.5 m
BRLM™ 080-10*	45 lbs 20 kg	10 ft 3.1 m	9.5 ft 2.9 m
BRLM™ 080-15*	65 lbs 29 kg	15 ft 4.6 m	14 ft 4.3 m

* Includes Rail, Splice and Chain. Guide Blocks are sold separately.

Tool Talk™ - Assembly & Maintenance Instructions



Free Instructional Aids

In addition to our detailed Operator's Manuals, we also have instructional videos and Powerpoint presentations delivered on DVDs and the web to help walk you through



the assembly, maintenance and repair of our tools. In the example above, the Lancing System assembly Powerpoint takes you from unpacking the crates to full mechanized operation. Each step in the process has been



photographed and detailed, ensuring proper assembly and function. Additional videos are also available explaining our maintenance and overhaul procedures for specific tools, including replacing high pressure seals.